

You can optionally configure email alerts. Email alerts are sent for the following events:

- Capture job status changes.
- Storage usage alerts.
 - These are generated when Transfer Appliance storage capacity reaches 95%, 97%, and 99% full.

Use the following procedure to configure optional email alerts.

1. Open the Transfer Appliance Web User Interface.
2. Click the **Settings** icon and select **Email Notification**.
3. Enter the following SMTP connection information:
 - For **SMTP Server**, enter your SMTP server address.
 - For **Port**, enter the TCP port your SMTP server uses.
 - For **Connection**, choose the appropriate security mechanism (SSL, TLS, or None).
 - Supply the **User Name** and **Password** for connecting to your SMTP server.
4. For **Sender Email Address**, enter an email account to be used as the sender of all notifications.
5. For **Recipient(s)**, enter a comma-delimited list of email addresses to send notifications to.
6. Click **Save**.

If you're using link aggregation, [configure link aggregation](/transfer-appliance/docs/2.0/setting-up-link-aggregation) next.

To start your transfer, choose the method you identified earlier:

- [Microsoft Windows workstation transfer](/transfer-appliance/docs/2.0/capturing-data-windows)

- [Linux workstation transfer](/transfer-appliance/docs/2.0/capturing-data-linux) (/transfer-appliance/docs/2.0/capturing-data-linux)
- [Export an NFS Share](/transfer-appliance/docs/2.0/exporting-nfs-share) (/transfer-appliance/docs/2.0/exporting-nfs-share)
- [Capturing data from HDFS](/transfer-appliance/docs/2.0/capturing-data-hdfs-nfs-share) (/transfer-appliance/docs/2.0/capturing-data-hdfs-nfs-share)

To change, view, or test Transfer Appliance configurations, see:

- [Testing network connectivity](/transfer-appliance/docs/2.0/testing-network-connectivity) (/transfer-appliance/docs/2.0/testing-network-connectivity)
- [Displaying network configuration settings](/transfer-appliance/docs/2.0/displaying-network-configuration)
(/transfer-appliance/docs/2.0/displaying-network-configuration)
- [Displaying Transfer Appliance information](/transfer-appliance/docs/2.0/displaying-appliance-information)
(/transfer-appliance/docs/2.0/displaying-appliance-information)
- [Resetting the capture user password](/transfer-appliance/docs/2.0/resetting-password) (/transfer-appliance/docs/2.0/resetting-password)
- [Resetting Transfer Appliance](/transfer-appliance/docs/2.0/resetting-appliance) (/transfer-appliance/docs/2.0/resetting-appliance)