

You can display system information for Transfer Appliance, including name, GUID, software version, hardware serial ID, and network configuration.

1. Open Transfer Appliance Console User Interface.
2. Sign in with the capture user account and password.
3. Select **Display System Information** from Transfer Appliance main menu and press **Enter**.

Other configuration tasks available include:

- [Test network connectivity](/transfer-appliance/docs/2.0/testing-network-connectivity) (/transfer-appliance/docs/2.0/testing-network-connectivity)
- [Display network configuration](/transfer-appliance/docs/2.0/displaying-network-configuration) (/transfer-appliance/docs/2.0/displaying-network-configuration)
- [Reset the capture user password](/transfer-appliance/docs/2.0/resetting-password) (/transfer-appliance/docs/2.0/resetting-password)