There are two versions of Transfer Appliance:

Model	Rackable?	Usable space
TA100	Yes	 Workstation capture and NFS share: 81 TB NFS capture: 74 TB
TA480	No	 Workstation capture and NFS share: 423 TB NFS capture: 4 x 100 TB partitions

Follow these instructions to prepare to receive the Transfer Appliance:

f you don't have adequate space to store and maneuve	Transfer Appliance,	contact <u>Transfer</u>	<u>Appliance support</u>
o:data-support@google.com).			

To find out more about appliance models, see <u>Transfer Appliance specifications</u> (/transfer-appliance/docs/2.0/specifications).

Once you have prepared to receive Transfer Appliance, <u>choose a data capture method</u> (/transfer-appliance/docs/2.0/choosing-capture-method).