<u>Migration Products</u> (https://cloud.google.com/products/data-transfer/)

<u>Transfer Appliance</u> (https://cloud.google.com/transfer-appliance/)

Documentation (https://cloud.google.com/transfer-appliance/docs/2.0/) Guides

Testing network connectivity

- 1. Open the Transfer Appliance Console User Interface.
- 2. Sign in with the user account and password provided to you by Google.
- 3. Select **Test Network Connectivity** from the **Menu** and press **Enter**.
- 4. Enter the IP address of the computer you want to ping and press **Enter**.
- 5. Click **Test** and press **Enter**.

The system sends four ping requests to the specified computer, then returns information about how many ping requests were successful.

What's next

Other configuration tasks available include:

- <u>Display network configuration</u> (https://cloud.google.com/transfer-appliance/docs/2.0/displaying-network-configuration)
- <u>Display Transfer Appliance information</u> (https://cloud.google.com/transfer-appliance/docs/2.0/displaying-appliance-information)
- Reset the capture user password
 (https://cloud.google.com/transfer-appliance/docs/2.0/resetting-password)

Except as otherwise noted, the content of this page is licensed under the <u>Creative Commons Attribution 4.0 License</u> (https://creativecommons.org/licenses/by/4.0/), and code samples are licensed under the <u>Apache 2.0 License</u> (https://www.apache.org/licenses/LICENSE-2.0). For details, see our <u>Site Policies</u> (https://developers.google.com/terms/site-policies). Java is a registered trademark of Oracle and/or its affiliates.

Last updated June 7, 2019.